

# Talent Monitor

## User Manual



**Prompter** People™

# Talent Monitor

## In the Box

Optional Regular Auto-Reversing Monitor




or

Optional Highbright Auto-Reversing Monitor



Counter Weight

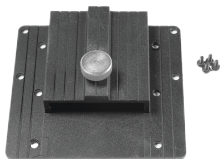

Modified VESA Plate

Talent Monitor Bracket



Allen Key



Catch Screw



# Talent Monitor

## In the Box

1



Remove your Teleprompter Monitor.

2



Put the Long Screw through the Front Sled.

3



Attach the Talent Monitor bracket sled to the Front Sled, ensure it's properly tightened into place.

4



Reattach your Teleprompter Monitor.  
Talent Monitor bracket sled properly attached.

# Talent Monitor

## In the Box

5




Remove the Catch Screw at the Bottom of the Talent Monitor Sled.

6



Attach your Talent Monitor, see step 7.


7

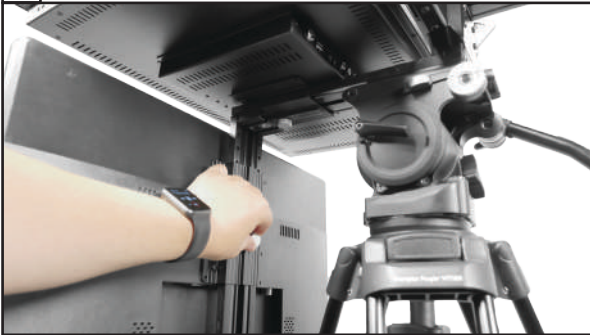

Before placing the Talent Monitor on, ensure the Tripod is able to support the additional weight, and that it is locked on both Tilt and Pan for the remainder of the setup.

Attach the Talent Monitor onto the the Talent Monitor Front Bracket, ensure the screw is properly tightened.

8

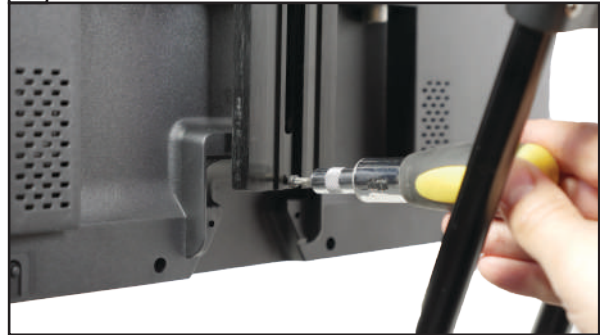

Reattach the Catch Screw at the Bottom of the Talent Monitor Bracket. It's very important to follow this step to ensure the Talent Monitor will not be able to slide off the Talent Monitor Bracket when adjusting.

# Talent Monitor

## In the Box

9



Talent Monitor properly setup without the back weight.

10



To Attach the back weight first remove the screw on the back weight and place the screw in to your back sled where you want your weight to be placed

11



You can loosen and adjust the position of your back weight as needed for balance, or add additional weights.

12



Make sure the Teleprompter is properly assembled and properly Balanced so that it is not Front Heavy or Back Heavy.

PrompterPeople Teleprompter Properly Assembled with the Talent Monitor Bracket.