





Prompter People™

QGear PRO In the Box

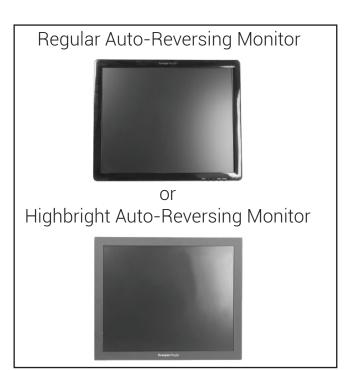

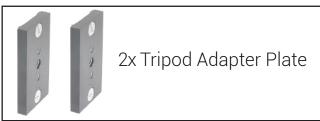














QGear PRO Quick Setup Guide

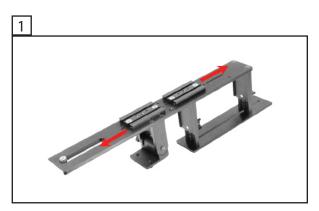

Tripod Adapter Plate comes attached to the sled, but the screws can be loosened with a flat head screwdriver or quarter and the plate can move across the base of the QPro Sled to achieve the best balance.



When the Tripod Adapter Plate is positioned for optimal balance, securely tighten the screws with a flat head screwdriver or quarter. You can attach your tripod plate to either the front or back adapter plate or both if necessary.



Attach your QPro sled to your Tripod or Pedestal.

*The 24" and 32" models do not have an adjustable tilt sled, but have the same setup instructions



Remove the screws on the front sled where the Glass Slides into place. Place the screws to the side in a safe place you will need these to attach your glass

QGear PRO Quick Setup Guide



Pull The Velcro up on the bottom of the hood.

Attach your Hood (Frame) by sliding it into place.



Position the Frame into place so that the screw holes are aligned. Then use the two thumbscrews you set aside to secure the Frame into place.



Ensure both of your screws are attached. It is important to ensure you do not over tighten the screws, but tighten them well enough that they stay into place.



Pull back down your Velcro hood and securely fasten the hook and loop sides so that no light gets into the interior of your hood.

QGear PRO

Quick Setup Guide




QPro Monitor Vesa Mount comes Assembled, but adjustments for positioning can be made using a phillips head screwdriver and repositing the VESA plate and screwing in the 4 screws. If you want to use your own monitor you can add our VESA Plate to your monitor.



Position the Monitor to reflect correctly, so the entire screen of the monitor is reflected in the glass, after you have added your Glass in step 11.
Use the thumbscrews to secure the Monitor into place.



Carefully unwrap your glass and slide it into your hood. The beamsplitter glass needs to go in with the felt side down, make sure you slide it into place level and facing out so that the plastic handle is at the top. If you are unsure which side is correct you can hold your finger nail to the glass (Without scratching it) if you do not see a gap between your fingernail and it's reflection, that is the side of the glass that should be facing your talent. If you do see a gap, that side of the glass should be facing the camera's lens.

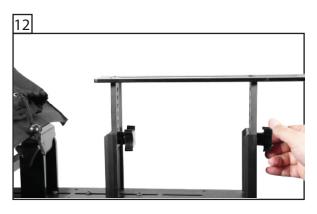

The height can be adjusted on the back sled with the riser. You can adjust the height to 7 positions.

You can also add on a Dual Height Riser for smaller cameras.

Prompter People™

QGear PRO Quick Setup Guide



Mount your camera and center your lens to the center of the glass. If you need to adjust the camera height with the riser remove the camera first.

Pull the snood around your lens when it is correctly positioned.



If you have a smaller camera like a Mirrorless, Camcorder, or DSLR camera you may want to use the included Dual Height Riser to give you additional height.

Pull the Snood around the lens when it is correctly positioned.



Glass Angle on the 15, 17, 19 inch QGear Pro models can be adjusted.

Standard sleds for the 24 and 32inch models do not allow angle adjustments, and are fixed at a 45° angle.

By Request, 24 and 32 inch models can come with the sled that allows beamsplitter angle adjustments.







QPro 24 | 32 **Properly Assembled** (Fixed 45° Angle Sled)