

Prompter Pal Pro

User Manual



Prompter People™

Prompter Pal Pro

In the Box

HighBright or Regular Auto-Reversing Monitor



or
TabGrabber



Adapter Plate



Smart Remote
Tablet Model ONLY



Monitor VESA Plate



Soft Bag Tablet | Soft Bag Monitor



Beamsplitter Glass 12"
and Front Sled



Back Sled



Smart Phone Mount



Low Boy + Dual Height Riser



15mm / Freestand Kits - Optional



Prompter Pal Pro

Quick Setup Guide - SLED

1



Position our Tripod Adapter Plate and attach your Tripod plate to our Adapter Plate. For smaller cameras under 5lbs attach your Tripod Adapter Plate to the front sled. For larger cameras attach your Tripod Adapter Plate to the back sled. (See Large Camera Setup Tutorial on PrompterPeople's YouTube)

2



Attach the Prompter Pal Pro to your tripod or pedestal or camera support.

3



Attach your Back Sled to the Prompter Pal Pro. Unlock the two side thumb screws to loosen the hood for step 4.

4



Pull hood, to a 45° Angle. This Angle should allow you to set your silver knobs into the slots and then lock your hood into place on both sides. Do not over tighten, but securely enough so that the hood will not fall with regular use.

Prompter Pal Pro

Quick Setup Guide - SLED

5




To add your Optional 12" Regular or HighBright Monitor you first need to detach the Catch Screw using a 7/64" Allen Key. Then slide your Monitor onto the front Sled. Securely Reset your Catch Screw to ensure the Monitor will safely remain secure.

6



If you have not purchased a monitor version Attach your Tab Grabber Pro to your front sled using the Thumb Screws, and ensure your Tab Grabber Pro is positioned properly and secure.

7

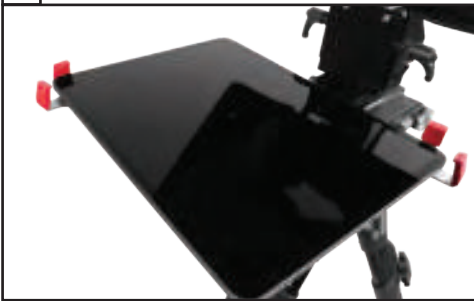

Attach the tablet or iPad.
Ensure your tablet holders are securely holding the tablet in place.

8



Attach the dual Height Riser if needed, using the included thumb screw. If you need to adjust the position of the dual height riser ensure you are securing your camera with your second hand until your dual height riser is securely set into place.

Prompter Pal Pro

Quick Setup Guide - SLED

9



To attach your Camera to the dual height riser you'll need to secure your camera into place using the Thumb Screw attached to the Dual Height Riser. Ensure both the riser and camera are secure before operating the Prompter Pal Pro.

10



Prompter Pal Pro properly assembled with the Back Sled, standard mounting and Tablet Base Model. For Freestanding Base Models and 15mm Base Models or Kits please see additional pages.

11



Prompter Pal Pro features 4 x 1/4 20 Top threaded Mounts for mounting Lights, Microphones, Talent Monitors (Confidence Monitors), Audio Records and More.
1/4 20 to Cold Shoe Adapters can be added for easier mounting, or articulating arms.

12



Prompter Pal Pro with Confidence Monitor attached to the Top Threaded slots with a double Ball adapter.

Prompter Pal Pro

Quick Setup Guide - Freestanding

1



Remove your Camera from the Dual Height Riser Remove the back sled, and take the Teleprompter off of the tripod.

2



Remove your Tripod Plate and use the 3/8" Center female thread to attach the Rapid Adapter. Attach the Rapid Adapter in your Freestanding Kit or Base Model to the Tripod Adapter Plate.

3



Attach Teleprompter to your Light Stand. Attach your Tablet or Monitor to the Prompter Pal The Camera should be mounted separately on a Tripod.

Move your camera into place behind the Teleprompter and adjust your Stand or Tripod height to center the lens in the beamsplitter glass properly.

4



Prompter Pal Pro with Freestanding Kit or Base Model properly assembled with the Rapid Adapter Light Stand, and camera on its own separate Tripod.

Prompter Pal Pro

Quick Setup Guide - 15 MM RailMount



Remove your Camera from the Dual Height Riser Remove the back sled.



Attach 15mm Rail Mount Adapter using a flat head screwdriver, and the flush screw.



Attach your 15mm Railmount Camera Rig. Lock your 15mm Rails into place on the PrompterPeople 15mm Rail Block.

Adjust your hood / camera to get the lens centered to the beamsplitter glass and pull the snood over your lens.



Prompter Pal Pro with 15mm Rail Mount Block and 15mm Camera Rig properly Assembled.